Print on plain white paper - Part # 122919

IMPORTANT INSTRUCTIONS

AIR SUPPLY VALVE CONNECTIONS TO URETHANE TUBING

1) With the compression nut and brass sleeve - supplied with the valve - in place, insert the poly flow fitting **all the way** into the valve. *(DO NOT use "pipe dope" or other compounds on the compression connection , a drop of oil will make tightening easier).* **Refer to Figure 1**
2) Tighten the compression nut until the sleeve begins to grip the poly flow fitting; Then tighten the nut 1/2 turn more.
3) Insert the square cut black urethane connection tube **all the way** into the poly flow fitting.
4) Tighten the knurl hex nut with the plastic sleeve finger tight: then tighten 1 turn using a wrench to obtain maximum connection tightness.
5) Check for leaks and if necessary, tighten 1/2 turn.

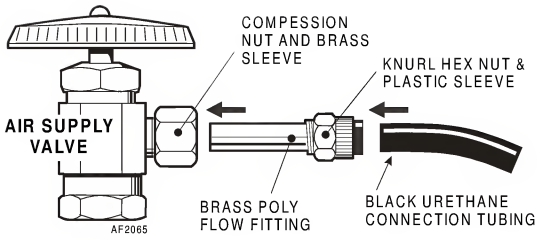

FIGURE 1

WATER SUPPLY VALVE CONNECTIONS TO MASTER WATER VALVE AND URETHANE TUBING

Installation of this valve will provide additional Protection against tubing connection failure should those connections be improperly installed.

1) With the compression nut and brass sleeve - supplied with the valve - in place, insert the poly flow fitting **all the way** into the valve. *(DO NOT use "pipe dope" or other compounds on the compression connection , a drop of oil will make tightening easier).* **Refer to Figure 2.**
2) Tighten the compression nut until the sleeve begins to grip the poly flow fitting; Then tighten the nut 1/2 turn more.
3) Insert the square cut black urethane connection tube **all the way** into Knurl hex nut and plastic sleeve.
4) Tighten the knurl hex nut with the plastic sleeve finger tight: then tighten 1 turn using a wrench to obtain maximum connection tightness.
5) Check for leaks and if necessary, tighten 1/2 turn.
6) Connect the 1/8" red tube provided to the barb fitting on the master water valve. **Refer to Figure 3.**
7) Cut the 1/8" red pilot air tubing and add the tee connector and clamps provided.
8) Make connections **as shown in Figure 3.**

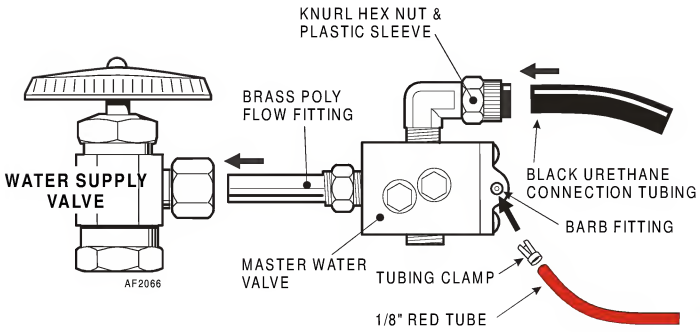

FIGURE 2

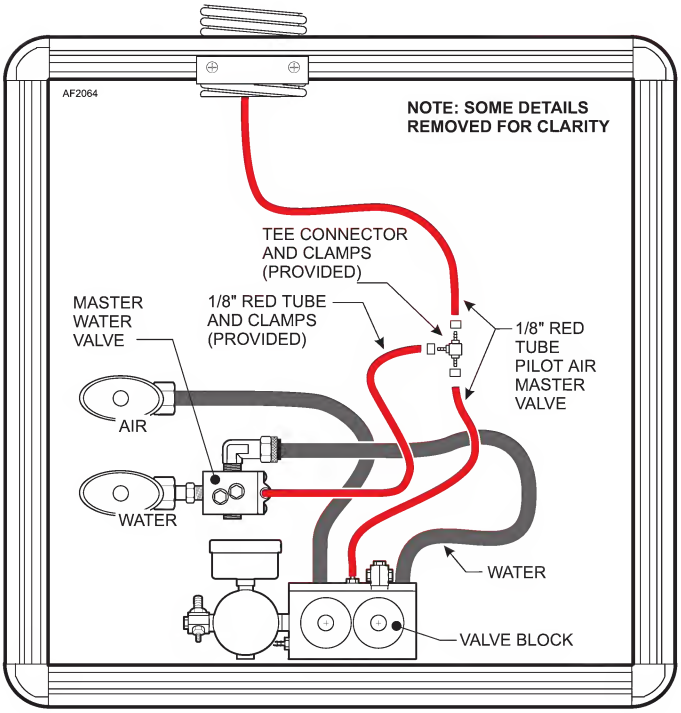

FIGURE 3

MANUFACTURER ASSUMES NO RESPONSIBILITY FOR FAILURE DUE TO IMPROPER INSTALLATION

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542